

**Wireless sensor**

CE

**Pull switch FZS**

Wireless pull switch 80x80 mm external dimensions, with internal frame dimensions 63x63 mm, 22 mm high.

When the red handle is pulled and released, a wireless telegram is sent to the Eltako wireless network.

The scope of supply contains two screws and two rawl plugs.

**Fitting**

First dismantle the fully assembled pull switch. To do this, remove the screw, unhook the cover and remove the intermediate frame together with the rocker and transmitter module by loosening the retaining bars at the top and bottom.

Fit the mounting plate by tightening the screws. Engage the frame together with the hook-in cut-outs at the top and the intermediate frame including the transmitter module and rocker with the rear ID 0 upwards. Insert the cover with the inserted cord into the hook-in cut-outs of the frame and screw tight into the retaining plate using the screw at the bottom.

**Independent of position**

The pull switch functions in any position, even when attached to the ceiling. The 2 metre long cord can be shortened on the handle side.

**Matching actuators**

The wireless pull switch transmits the same wireless telegrams when operated as a wireless pushbutton and can therefore be taught-in in actuators and the FVS software in the same way.

**Teaching-in wireless sensors in wireless actuators**

**All sensors must be taught-in in the actuators so that they can detect and execute commands.**

The teach-in process is described in the operation manual of the actuators.

See also catalogue "The Eltako Wireless System" or [www.eltako.com](http://www.eltako.com).